
INSTALLATION INSTRUCTIONS

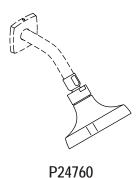

INSTALLATION INSTRUCTIONS

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN

CAUTION: Risk of scalding. KALLISTA low-flow showerheads are designed for use with compatible KALLISTA valves. When installing a low-flow product to an existing showering system, verify compatibility before showering. Do not use this KALLISTA low-flow product with a shower valve that allows the water temperature to become too hot when other plumbing products are used.

Prior to using your shower, verify your new showerhead is compatible with your shower valve (located behind the wall):

- While standing outside the shower, turn on the shower valve. Do not step into the shower.
- Adjust the water to your typical showering temperature.
- Have someone flush the nearest toilet.
- With your hand, carefully check the water temperature from the showerhead while the toilet is refilling.
- If the water becomes significantly more hot, you will need to replace the shower valve with a compatible KALLISTA valve or return your showerhead.

NOTICE: For a showerhead rated 2.0 gal/min (7.6 L/min) maximum, use with an automatic compensating valve rated 1.6 gal/min (6.1 L/min) or less.

- ☐ Observe all local plumbing and building codes.
- ☐ Shut off the main water supply.
- ☐ KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

 
TOOLS AND MATERIALS



Adjustable Wrench



Hex Wrench



Strap Wrench



Thread Sealant



Plumbers Putty

INSTALLATION INSTRUCTIONS

INSTALL THE SHOWERHEAD Apply thread sealant. Thread the showerhead on and tighten. ☐ Run cold and hot water through the shower arm for several minutes to flush out dirt and debris. ☐ Install the showerhead as shown. ☐ Secure the showerhead to the shower arm using a clean wrench. ☐ Pivot the showerhead to verify smooth operation. ☐ Run water through the showerhead to check for leaks between the shower arm and showerhead inlet. Adjust as needed.