INSTALLATION INSTRUCTIONS

P24940, P24942



INSTALLATION INSTRUCTIONS

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN

NO	TICE: Choose an automatic compensating valve with the appropriate minimum flow rating, to assure your
	ve will provide safety at the lowest flow rates. For a showerhead with a maximum flow rate of 2.0 gal/min (7.6
I/mi	n), use with an automatic compensating valve rated 1.6 gal/min (6.1 l/min) or less.
	The finished wall or bath/shower unit must be installed prior to installing this trim.
	Observe all local plumbing and building codes.

- ☐ The appearance of your product may differ from what is shown in these instructions; however, the installation procedure is the same.
- ☐ KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

TOOLS AND MATERIALS

Rags

Silicone Sealant (Optional)

Sealant Tape

Strap Wrench

INSTALLATION INSTRUCTIONS

