


INSTALLATION INSTRUCTIONS

TOWN SQUARE® S DUAL CONTROL WIDESPREAD LAVATORY FAUCET

Thank you for selecting American Standard... the benchmark of fine quality for over 140 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

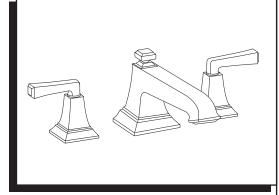

Certified to comply with ANSI A112.18.1M

RECOMMENDED TOOLS



Flat Blade Screwdriver



74558XX



Channel Locks

Adjustable Wrench

Fig. A.

SPOUT BASE

INSTALL SPOUT Fig. A.

CAUTION

Turn off hot and cold water supplies before begining.

- Insert SHANK (1) and HOSE (2) through center hole.
- Thread LOCKNUT (3) onto SHANK (1) from underside of sink or mounting surface.
- Align and center SPOUT (4). Tighten LOCKNUT (3).


1A

INSTALL VALVE BODIES

Fig. B.

- Remove LOCKNUT (6) from SIDE VALVE SHANKS (5).
- Insert Hot and Cold SIDE VALVE HOSES (7),
 FLEXIBLE SUPPLIES (7a) into mounting holes.
- Thread LOCKNUT (6) onto each SIDE VALVE SHANK (5) from underside of sink or mounting surface.
- Align and center SIDE VALVES. Tighten LOCKNUTS **(6)**.



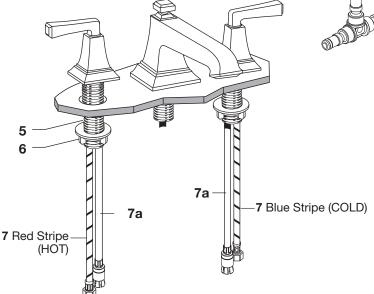


2 INSTALL POP-UP DRAIN

 Apply a bead of putty to underside of FLANGE (1).




• Drop FLANGE (1) into LAVATORY DRAIN (2). From below assemble RUBBER GASKET (3), METAL WASHER (4) and LOCK NUT (5). Do not tighten.

2a

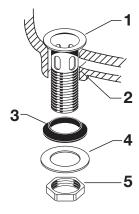


2b

• Place SEAL (1) with small end facing up into TAILPIECE (2) and tighten against DRAIN BODY (4). PIVOT ROD (3) opening in TAILPIECE (2) should face the rear of the lavatory. Tighten LOCK NUT (5) with channel locks. Do not over tighten.

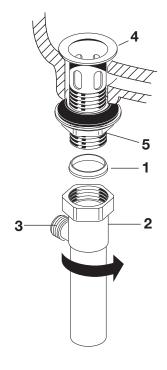

2c

- Assemble PIVOT ROD (1), PIVOT NUT (2), CLIP (3) and SEAL (4) as shown. Hand tighten PIVOT NUT (2) Drop STOPPER (5) into drain. (For vandal proof drain rotate stopper so PIVOT ROD (1) goes through EYE (6) of STOPPER (5). Make connection to "P" TRAP.
- Remove one end of CLIP (3) from PIVOT ROD (1) by squeezing ends together while sliding.
- Insert PIVOT ROD (1) into second or third hole in EXTENSION (7) and reassemble CLIP (3). (EXTENSION (7) may need to be bent.)
- Adjust STOPPER (5) height by repositioning EXTENSION (7) and tightening THUMBSCREW (8).

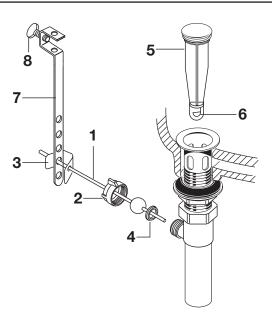


TEST INSTALLED FITTING

- With HANDLE (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.
- Remove AERATOR (3).
- Operate HANDLE (1) to flush water lines thoroughly.
- Replace AERATOR (3).

CHECK DRAIN CONNECTIONS

- Fill lavatory with water. Check that DRAIN STOPPER (4) makes a good seal and retains water in SINK.
- Release DRAIN STOPPER (4) down and check all drain connections and "P" trap for leaks. Tighten if necessary.

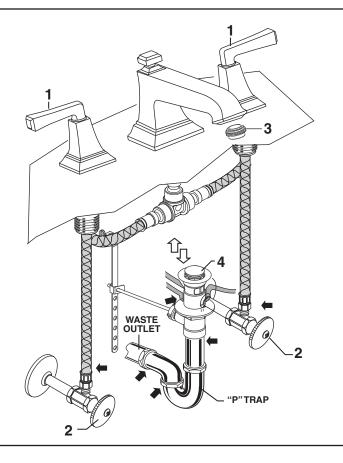

SERVICE

CAUTION Turn off hot and cold water supplies before beginning.

Change Direction of the Handle


- Turn valves to OFF position.
- Turn off water supplies.
- Pull HANDLE (1) "UP" firmly to release from PLASTIC INSERT (6).
- Remove SCREW (3) and pull off PLASTIC INSERT (2).
- Remove RETAINING O-RING (4).
- Lift and turn STOP WASHER (5) 90°. Replace RETAINING O-RING (4).
- Re-install HANDLE ASSEMBLY.

To Change Cartridge:

- Remove HANDLE (1), ADAPTER (2) and SCREW (3) via steps above.
- Remove CARTRIDGE (7) by pulling up on it after rotating CARTRIDGE NUT (8) counter clockwise.

Aerator Clean Out

- AERATOR may accumulate dirt causing distorted and reduced water flow. Remove AERATOR by using the AERATOR KEY and rinse to clear any debris.
- If spout drips, operate handles several times from OFF to ON position. Do not force - handles turn only 90°.

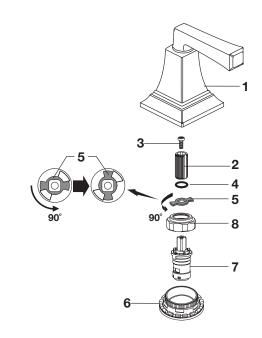

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard TOWN SQUARE®S **DUAL CONTROL** WIDESPREAD LAVATORY MODEL NUMBER 74558XX M970461-YYY0A LIFT ROD & ROD M970460 -YYY0A (7455.8X7) HANDLE KIT M970524 -0020A HANDLE KIT WITH RED INDEX (HOT) **7455.811/814** M970526 -0020A HANDLE KIT WITH BLUE INDEX (COLD) 7455.214/217 M923840-0070A M964055-0070A AERATOR (1.2 GPM) HANDLE ADAPTER KIT M964005-0070A CARTRIDGE KIT M970462-YYY0A M970472-0070A DECK ADAPTER SPOUT ESCUTCHEON M906617-0070A MOUNTING NUT M953450-YYY0A DRAIN ASSEMBLY Replace the "YYY" with appropriate finish code POLISHED CHROME 002 **BRUSHED NICKEL** 295 **LEGACY BRONZE** 278 **POLISH NICKEL** 013 M904516-0070A T-CONNECTOR HOT LINE FOR HELP For toll-free information and answers to your questions, call: 1 (800) 442-1902 Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) PART OF LIXIL Weekdays 8:00 a.m. to 7:00 p.m. EST IN MEXICO 01-800-839-1200