
American Standard

INSTALLATION INSTRUCTIONS

TOWNSEND®

18" TOWEL BAR 24" TOWEL BAR TOWEL RING ROBE HOOK 24" DOUBLE TOWEL BAR TOILET PAPER HOLDER 7353.018 Series 7353.024 Series 7353.190 Series 7353.210 Series 7353.224 Series 7353.230 Series

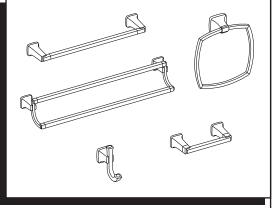

Certified to comply with ANSI A112.18.1M


Thank you for selecting American Standard... the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

RECOMMENDED TOOLS










Hex Key


1 INSTALLATION OF MOUNTING BRACKETS FOR ALL WALL MOUNTED ACCESSORIES

- The WALL MOUNTED ACCESSORIES work best if secured to a wall stud or cross brace within the wall, using the SCREWS (2) supplied.
- If the ACCESSORY is to be installed on a tile or plaster wall, the ANCHORS (3) and SCREWS (2) should be used.
- Determine desired height and location (optional) and mark a center line. Make sure the centerline is level. Using the MOUNTING BRACKET (1) as a template, mark the two spots for the mounting holes. If MOUNTING BRACKET (1) is secured to a stud or cross brace. drill small pilot holes for SCREWS (2).
- For installations on tiled walls or drywall, use TILE ANCHORS (3) and SCREWS (2) for securing MOUNTING BRACKET (1) to wall. Drill two 1/4" diameter holes a minimum of 1-1/4" deep. Insert the two TILE ANCHORS (3) flush with face of finished wall. Place MOUNTING BRACKET (1) over TILE ANCHORS (3) and insert SCREWS (2) provided with a flat blade screwdriver. See illustration below.

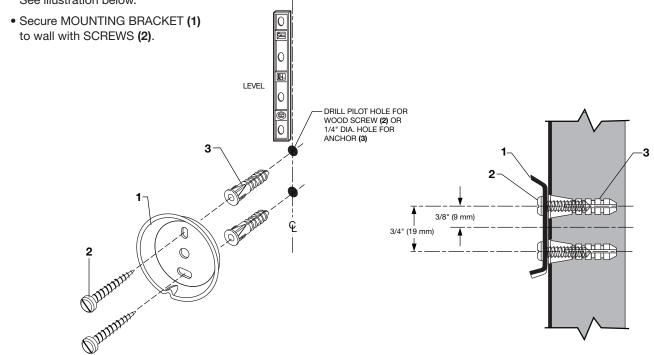


TOWEL RING and ROBE HOOK INSTALLATION

Refer to Step 1 for installation of MOUNTING BRACKETS (2). Align accessory and place ACCESSORY ESCUTCHEON (1) onto MOUNTING BRACKET (2) Secure accessory with SET SCREW (3) using a 2.5 mm HEX WRENCH (4).

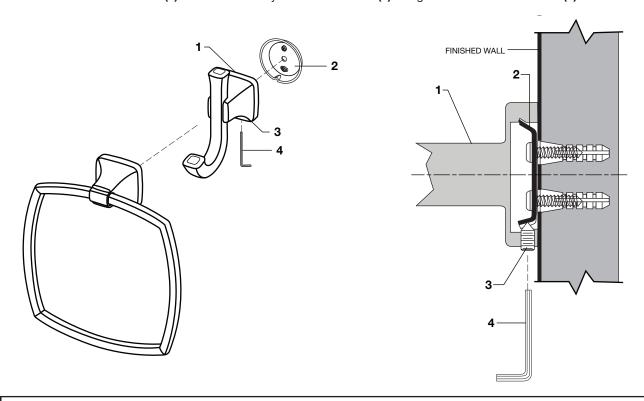


3 INSTALL TOILET PAPER HOLDER

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 7-1/8" (182 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3) using a 2.5 mm HEX WRENCH (4).

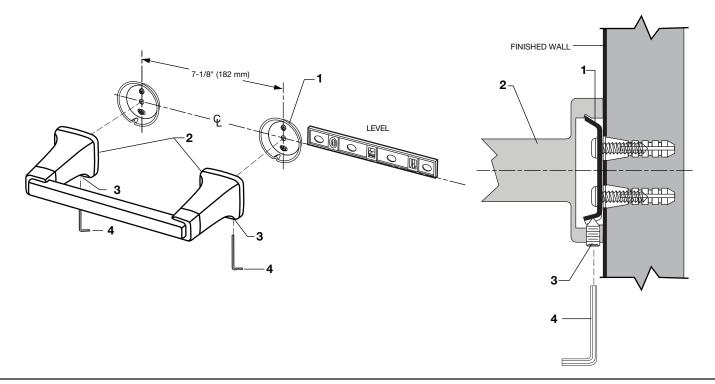


18" TOWEL BAR INSTALLATION

• Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 18" (457.2 mm). Make sure the two MOUNTING BRACKETS (1) are level.

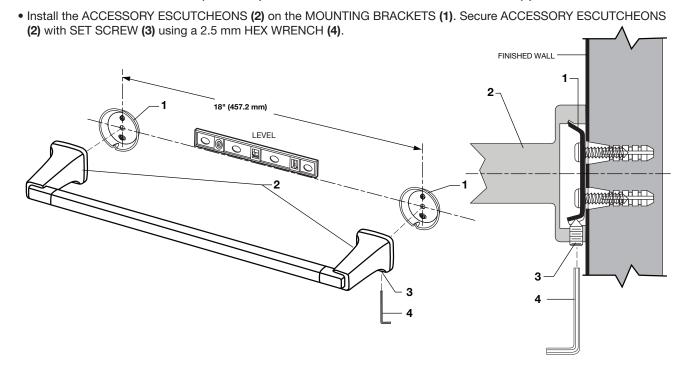

24" TOWEL BAR and DOUBLE TOWEL BAR INSTALLATION

- Refer to Step 1 for installation of MOUNTING BRACKETS (1). NOTE: The center line distance between the two MOUNTING BRACKETS is 24" (609.6 mm). Make sure the two MOUNTING BRACKETS (1) are level.
- Install the ACCESSORY ESCUTCHEONS (2) on the MOUNTING BRACKETS (1). Secure ACCESSORY ESCUTCHEONS (2) with SET SCREW (3) using a 2.5 mm HEX WRENCH (4).

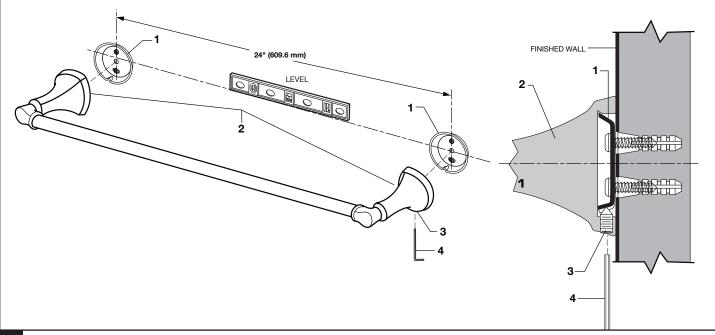

6 CARE INSTRUCTIONS:

DO: CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.

DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard **TOWNSEND®** 18" TOWEL BAR 24" TOWEL BAR **TOWEL RING ROBE HOOK** 24" DOUBLE TOWEL BAR **TOILET PAPER HOLDER MODEL NUMBER** 7353.018 Series 7353.024 Series **TOILET PAPER HOLDER** 7353.190 Series 7353.230 7353.210 Series 7353.224 Series 7353.230 Series M964248-0070A MOUNTING KIT Replace the "YYY" with appropriate finish code POLISHED CHROME 002 SATIN NICKEL 295 **TOWEL RING** 7353.190 POLISHED NICKEL 013 LEGACY BRONZE 278 **ROBE HOOK** 18" TOWEL BAR 7353.210 7353.018 24" TOWEL BAR 7353.024 24" DOUBLE TOWEL BAR M964248-0070A MOUNTING KIT 7353.224 HOT LINE FOR HELP For toll-free information and answers to your questions, call: 1 (800) 442-1902 Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST PART OF LIXIL IN MEXICO 01-800-839-1200